


PS2FT APPLIANCE SAFETY-SET BRACKET INSTRUCTIONS:


Materials and Tools Required:


- Marker
- Hammer drill with 3/8" masonry bit
- Hammer
- Punch (3/16" diameter or smaller)
- Silicone sealant


Prior to installation, make sure that the floor is dry, clean, and free from grease. Locate each cooking appliance below the appropriate fire suppression nozzle under the exhaust hood.

- 1. Center the rear wheels of the cooking equipment between the two ramps of the **PS2FT**. The dual-ramp design allows the **PS2FT** to be on either side of the wheel. Mark each of the **PS2FT** mounting holes with a marker.
- **2.** Move the equipment safely out of the work area. In the marked locations from Step 1, drill $\frac{3}{8}$ " holes using the hammer drill <Fig 1>. With a hammer, tap each anchor (included) to $\frac{3}{8}$ " below the floor surface <Fig 2>. Set the anchor by using a punch to drive the anchor insert towards the bottom of the anchor <Fig 3>.

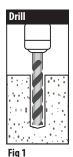

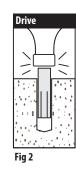

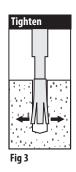

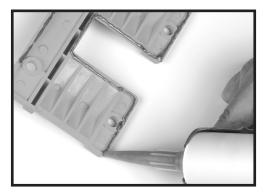

3. Apply a bead of silicone sealant around the outside edges of the bottom of the **PS2FT**.

5. Return the cooking equipment back into position on the **PS2FT**.



4. Place the **PS2FT** in its final location and install the included socket cap screws and washers as shown.

